



U2

MESSAGE**PRO**[™]
User Manual

Ver: 3.3

Update:2011-11-03

P/N: 8502030270

ANSER CODING INC. (TAIWAN)
HEADQUARTERS & R&D CENTER
9F-5, No.760, Sec. 4, Bade Rd.,
Taipei City 105,Taiwan
TEL: +886-2-3765-3488
FAX: +886-2-3765-3025

ANSER CODING INC. (CHINA)
GLOBAL BUSINESS CENTER & MANUFACTURING BASE
7F, NO.52 HULI DADAO XIAMEN 361006, CHINA
TEL: +86-0592-571-8888
FAX: +86-0592-571-0888


ANSER-U2.COM


Content

1. OPERATING INSTALLATION	1
2. MESSAGE BROWSER	2
3. EDITING MESSAGE	4
MESSAGE EDITOR	4
TEXT	6
WINDOWS FONT	7
LOGO	7
PRODUCTION DATE	8
EXPIRY DATE	9
SHIFT	9
SINGLE COUNTER	10
LOT-BOX COUNTER	11
BARCODE	12
STRING	12
4. FUNCTION	14
CONFIGURATION	14
1. Measurement	14
2. LCD Backlit Saving.....	14
3. Daylight Saving Time	14
ALARM OPTION	15
1. Alarm-kit (Optional).....	15
2. Counter Alarm.....	15
3. Key Tone.....	16
4. Printing beep	16
EDITING OPTION	17
1. Customer Year.....	17
2. Rollover Hour	17
3. Message Name	17
4. Counter Reset.....	17
5. Pre-Zero	18
6. Shift.....	18
7. Date/Time Format	18
PRINTING SETUP	20
1. PrintHead.....	20


2. Pre-purge.....	20
3. Photocell.....	20
4. Encoder and Conveyor.....	21
5. Repeat Print.....	21
6. Printing Display Mode.....	21
5. PC-TOOLS	22
USER ACCOUNT.....	22
1. Login Option.....	22
2. User Management.....	24
SYSTEM BACKUP/RESTORE.....	25
1. Backup.....	25
2. Restore.....	25
LOGO MANAGEMENT.....	26
REGISTRATION.....	27


Notes and Warning

 **NOTE:** Indicating important information that helps you make better use of U2.


 **WARNING:** Indicating either potential damage to hardware or loss of data and telling you how to avoid the problem.

Operating Installation

1. Get “U2 Message PRO Setup_x.x.x.x.exe” from your disk; double click  to install the Message PRO software.
2. Select the language that you want to install; the system will display all the corresponding languages that PC supported.

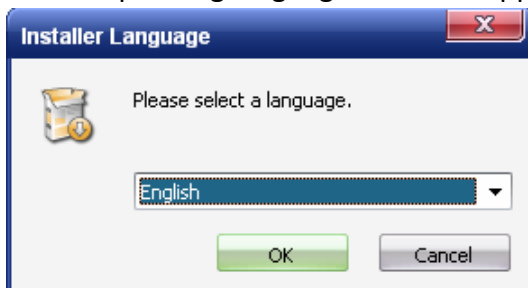

3. Click **Next** to install the U2 Message PRO.
4. Click **Next** to choose installs location.

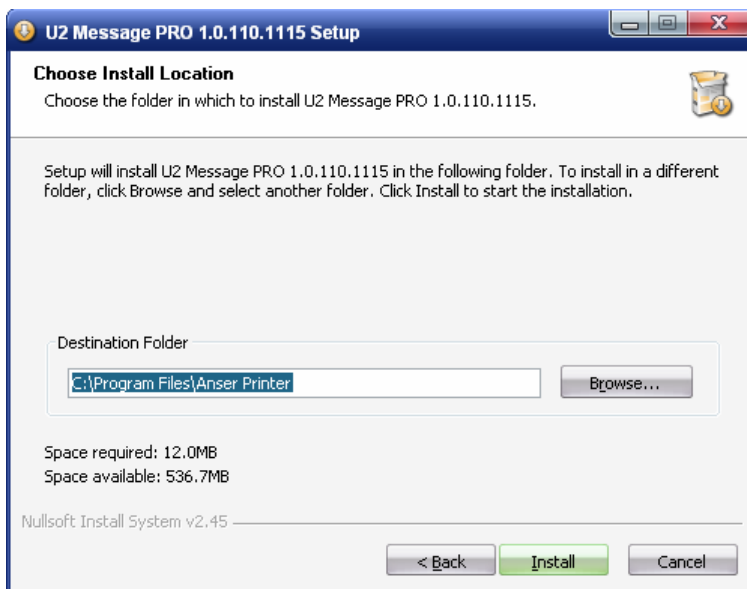


5. Click **Browse** you can customize the destination folder and then Click **Install**, to finish the installation procedure.
6. After installing successfully, the program will create icon on your desktop, double click **U2** to start the program.


Message Browser


SD card

The SD card is the ultimate source of transferring any editing message or setting for U2 printer.


In **MessagePRO**, three different icons representing SD card Status.


: No SD card, but still able to edit the message.

: SD card has not been initialized; please insert the card into U2 printer for activation.

: SD card is good to go; synchronizing between pc and SD card.


Message Browser Screenshot

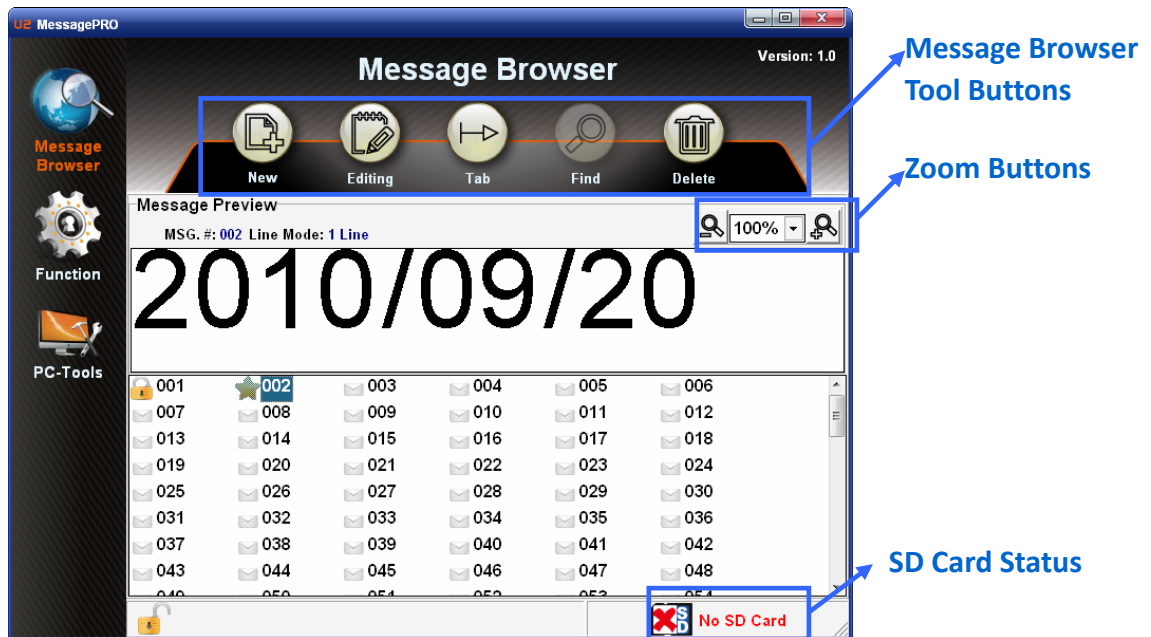

 Message list: The message marked ★ means ready for printing.








Menu Panel:

 Take you back to **Message Browser** anytime.

 Manage different setting for U2 printer. See [Function](#) for detail.


 Manage different setting for **MessagePRO**. See [PC-Tools](#) for detail.

Tool Buttons Description


Icons	Description
	Create a new message
	Edit selected message;
	Delete the selected message
	Search message (When the Message Name option is ON)
	Setup the printing delay
	Zoom out (200%, 175% ... 20%)
	Zoom in (25%, 50% ... 200%)

Right click menu

Copy to	Copy the whole message content to different message No.
Ink Report	Get the Ink Report of selected message
Rename	Rename message (When the Message Name is ON)
<i>Select Print Message</i>	Ready for printing


 For left-handed, simply reverse the mouse button with its function.


Copy To: Select message # and name.

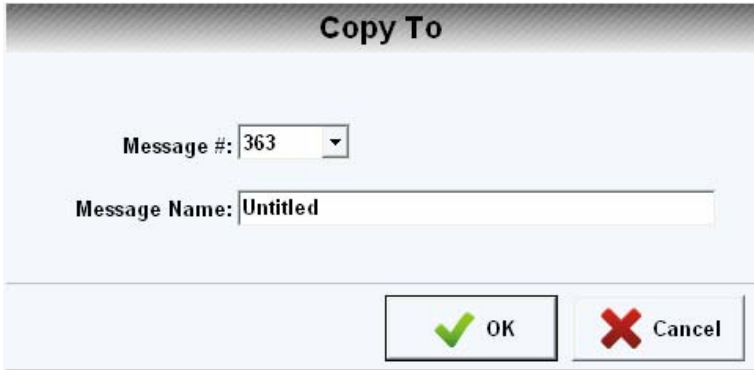





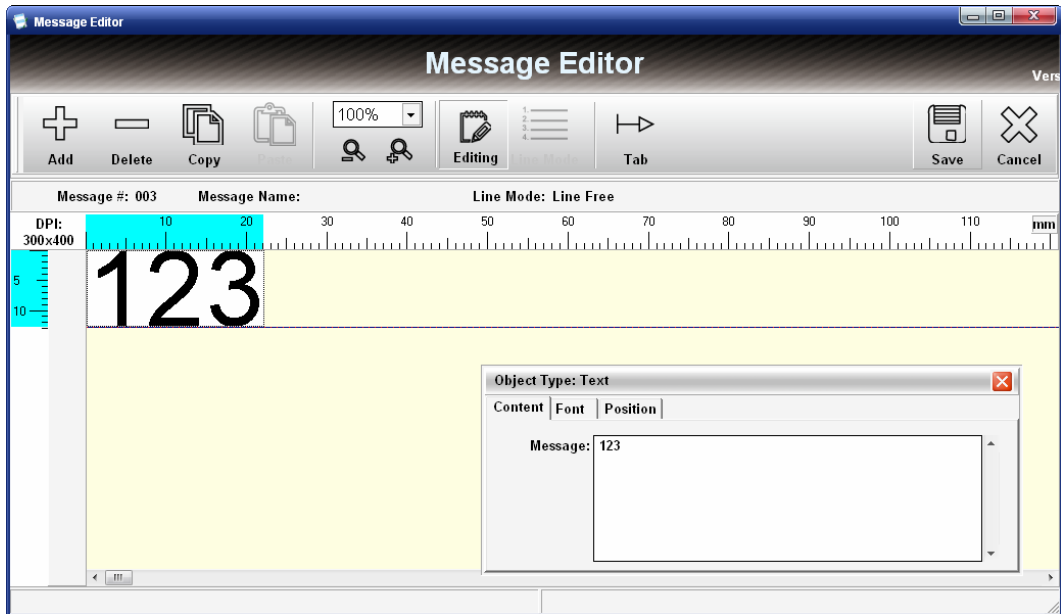


 
Editing message




Message Editor

Click  or Double-click under **Message Browser**.




Message Editor Tool Buttons

Button	Description	Access Key
	Add a object to the message	None
	Modify the properties of an object	None
	Delete the selected objects	Hotkey: Delete Right Click: Delete
	Copy object	Hotkey: Ctrl + C Right Click: Copy To
	Paste object	Hotkey: Ctrl + V Right Click: Paste
	Zoom out (200%, 175% ... 20%)	None
	Zoom in (25%, 50% ... 200%)	None
	Line Mode: Line Free \ 1Line \ 2Lines \ 3Lines \ 4Lines	None

	Setup message delay	None
	Save editing message and exit to Message Browser	None
	Cancel Message Editor	None

 **Line Mode**


Click , access to **Line Mode**.

You can choose **Lines** or **Line Free**.

- Lines:
 - a. One Line: Editing system text (2.7mm, 3.6mm, 5.5mm, 8.0mm, 10mm, 12.7mm), Window Font and various objects;
 - b. Two Lines: Editing system text (2.7mm, 3.6mm, 5.5mm), Window Font and various objects, However, no barcode allow and objects can't cross the dividing line;
 - c. Three Lines: Editing system text (2.7mm, 3.6mm), Window Font and various objects. However, no barcode allow and objects can't cross the dividing lines;
 - d. Four Lines: Editing system text (2.7mm), Window Font and various objects. However, no barcode allow and objects can't cross the dividing lines;
- Line Free: No restriction of creating any combination of objects and texts in any way you desired.

 **Window Font** is not the system text, but an object with graphics.



 A Line Free edited message can't be re-edited after downloading to U2 printer via SD card.


Text

1. Add Text Object: In **Message Editor**, click  >  .




2. Editing Text Object attribution as following:


- Message Content: Input the letters and numbers.

 System default text does not support lower case.

- Position: Display X/Y-axis, width and height of the object.

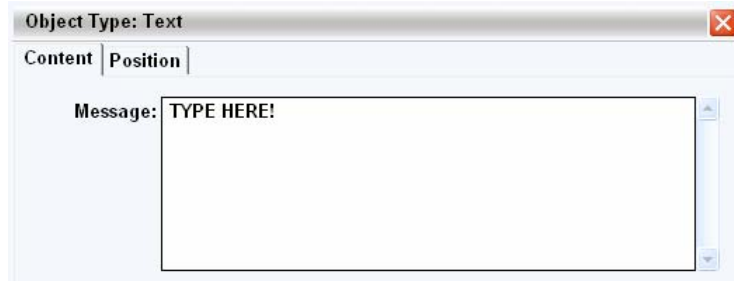

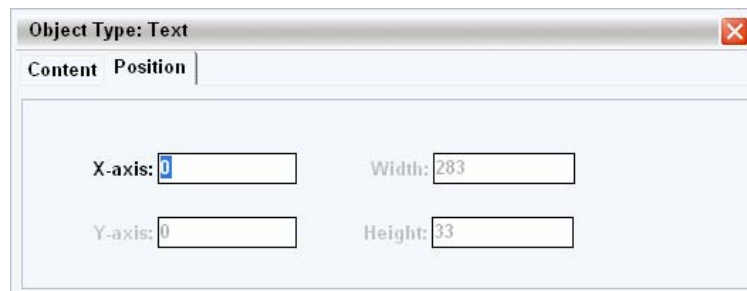

(Content tab)




(Position tab)

Windows Font


1. Add Windows Font Object: Under **Message Editor**, click  > .

2. Editing Windows Font Object attribution as following:


- Content: Input any character supported by your Windows.
- Font: Select font type and font size for object content.

 For non-Roman character, you must select the appropriate font type in order to display correctly on the message screen.

- Position: Display X/Y-axis, width and height of the object.

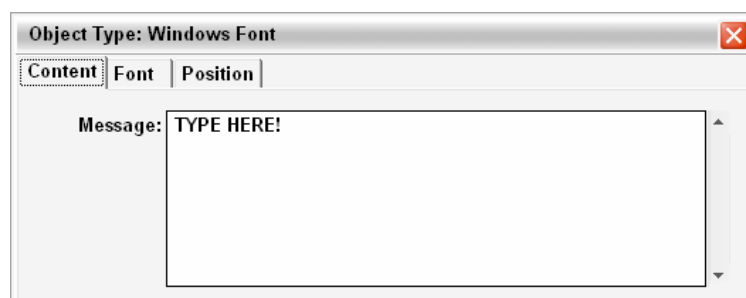

(Content tab)

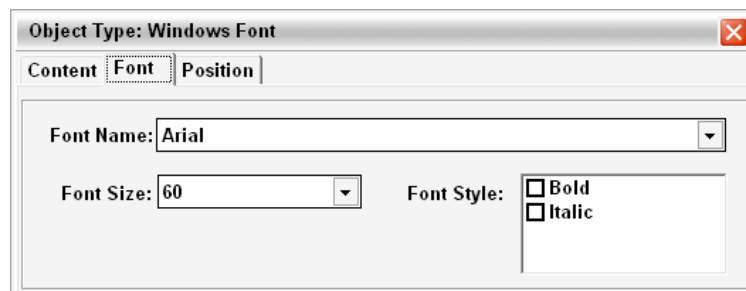


(Font tab)

Logo

1. Add LOGO Object: Under **Message Editor**, click  > .

2. Editing LOGO Object attribution as following:

- Content: Open a logo file.

 
 You can only open logo file through designed folder. (Refer to Logo Management)

- Position: Display X/Y-axis, width and height of the object. (Refer to [Text](#))



(Content tab)

Production Date

1. Add Production Date Object: Under **Message Editor**, click  > .

2. Editing Production Date Object attribution as following:


- Content: Current Date.

 It can't be edited as current date reflects to the date of your window system.

- Font: Select font size for object content. (Refer to [Text](#))

 For font size editing availability, please see line mode.


- Position: Display the X/Y-axis, width and height of object. (Refer to [Text](#))

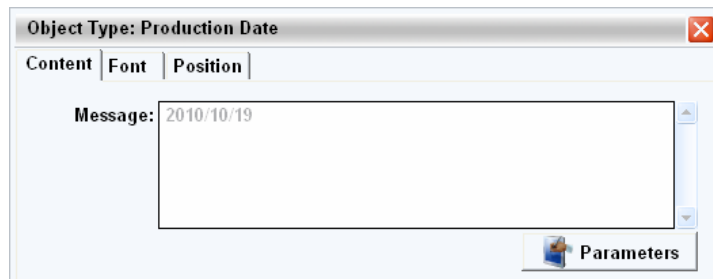


(Content tab)

- Parameters: Click  and select the **Date/Time Format** from drop-down menu.

If the **Date/Time Format** you desired does not exist in the system, you can simply add /edit the format template accordingly.

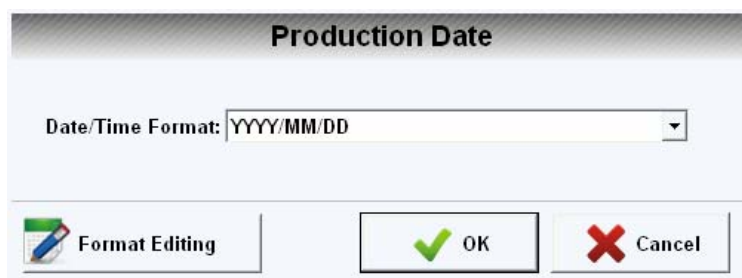

3. Format Editing.

If the date/time format you need does not exist in system, please click  button to add/delete/modify data/time format. (Refer to [Message Editor](#)-> [Date/Time Format](#))

Expiry Date


1. Add Expiry Date Object: Under [Message Editor](#), click  > .

2. Editing Production Date Object attribution as following:

- Content: Expiry Date.

 It can't be edited as current date reflects to the date of your window system.

- Parameters: Refer to [Production Date](#).
- Font: Refer to [Production Date](#).
- Position: Refer to [Text](#).

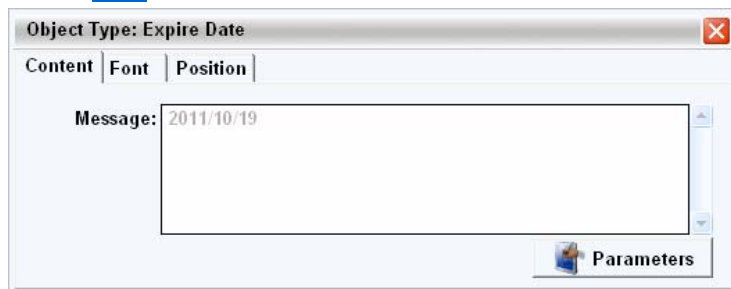


(Content tab)

Shift


1. Add Shift Object: Under [Message Editor](#), click  > .

2. Editing Counter Object attribution as following:

- Content: Shift Code.
- Font: Refer to [Production Date](#).
- Position: Refer to [Text](#).

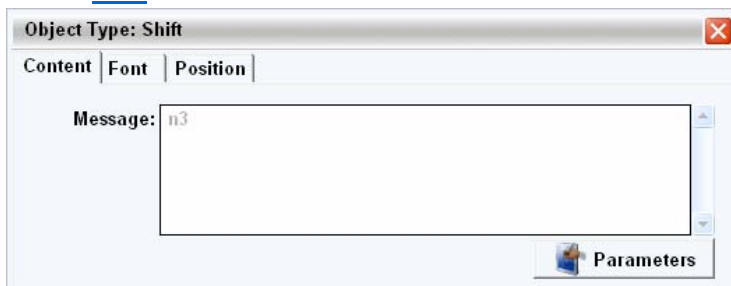


(Content tab)



- Parameters: Click the , access to the **Shift** interface.

Allow user records all operators and their starting time.

Shift	
Shift Name (Capitalize font only)	Start Time
n1	08:00
n2	12:00
n3	13:00
n4	18:00
n5	20:15

 The print content is depended on the actual printing time, not editing time. (Refer to [U2 PRINTER USER MANUAL](#))

Single Counter

- Add Single Counter Object: Under **Message Editor**, click  > .
- Editing Counter Object attribution as following:
 - Content: Display the minimum value of Single counter.
 - Font: Refer to [Production Date](#).
 - Position: Refer to [Text](#).


Object Type: Single Counter ✖

Content | Font | Position

Message: 00000001

 Parameters

(Content tab)


- Parameters: Click the , and input the **Minimum**, **Maximum** and **Step** value.

Single Counter



Start:


End:

Step:

-  Minimum--the first value of counter.
- Maximum--the last value of counter without restart.
- Step--difference between two adjacent values.
- To count up: input positive step value.
- To count down: input negative step value with minus sign (-).

Lot-Box Counter


1. Add Box/Lot Counter Object: Under **Message Editor**, click   .
2. Editing Counter Object attribution as following:
 - Content: Display the minimum value of Lot-Box.


 Depends on the field name you selected. You need add two Box/Lot Counter Objects as **Box** and **Lot**.


- Font: Refer to [Production Date](#).
- Position: Refer to [Text](#).



(Content tab)

- Parameters: Click the , and input the **Lot** and **Box Counter** value.

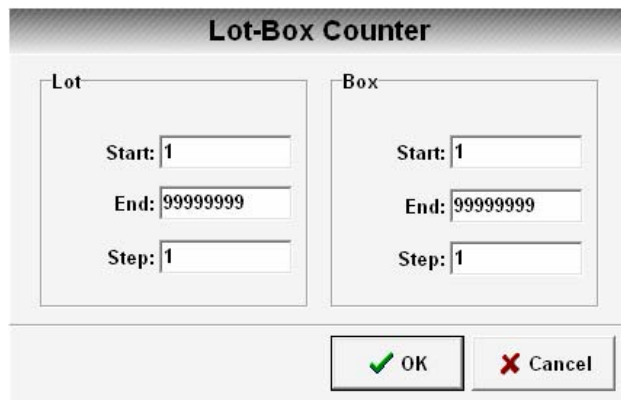


 Definition Function: Box and lot should be used together, when the box prints over the max value, the box will reset to minimum value and lot will advance a step value. Input each field value of counter according to your needs. (Refer to [U2 PRINTER USER MANUAL](#))

Barcode


1. Add barcode object: Under **Message Editor**, click  > .


2. Editing Barcode Object attribution as following:


- Barcode Type: Select barcode type.
- Content: Input the content of barcode.

 For barcode editing rules, please refer to **U2 PRINTER USER MANUAL**.

- Width-Level (Range: 1~10)

 At the width-level 1 or 2, Text Mode turns **OFF** automatically.
At the width-level 3 to 10, you can select Text Mode **ON** or **OFF**.

 Width-level indicates the spacing between bars.

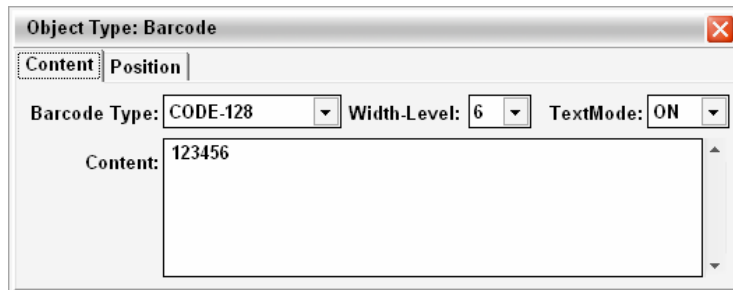

(Content tab)


- Text Mode:
 - ON: Display input content of the barcode.
 - OFF: Not display input content of the barcode.

String


1. Add String Object: Under **Message Editor**, click  > .


2. Editing String Object attribution as following:

- Content: String 1, you can select deferent string. (String No.1~5)
- Font: Refer to [Production Date](#).
- Position: Refer to [Text](#).

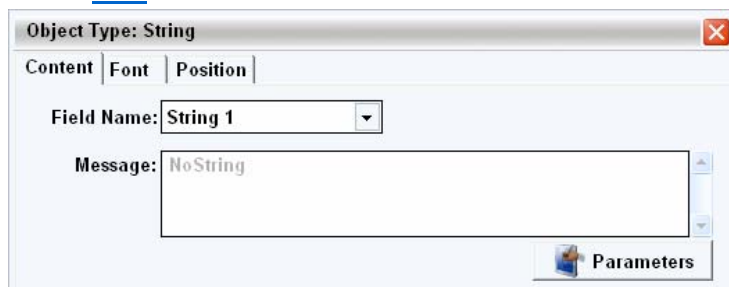

(Content tab)


- Parameters: Click the , and input the text string into a string field.

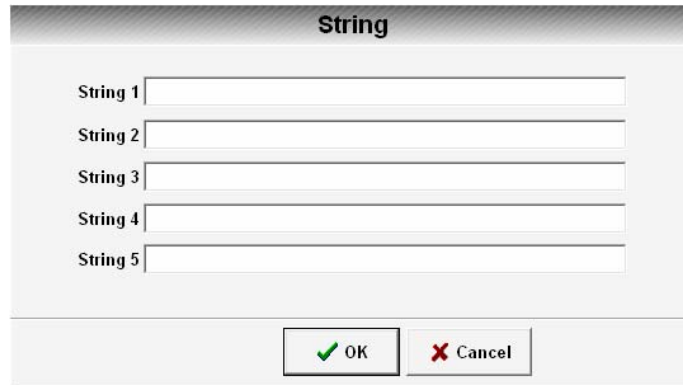


The image shows a dialog box titled "String". It contains five text input fields, each labeled "String 1" through "String 5". At the bottom of the dialog box, there are two buttons: "OK" with a green checkmark icon and "Cancel" with a red X icon.

Function

Function on **MessagePRO** configures the function setting to U2 printer.

 U2 printer will synchronize the configurations automatically when the SD card insert into the U2. Some U2 functions are not available for **MessagePRO**, such as **Language** and **System Clock**.

Configuration

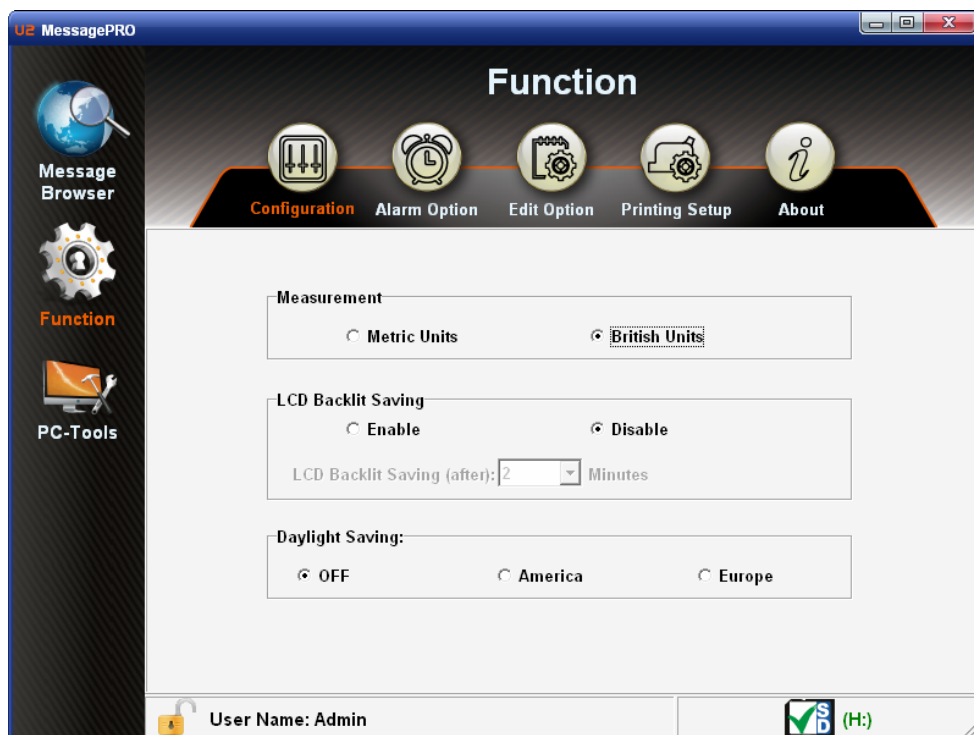


1. Measurement

Choose the unit measurement between Metric and Imperial Units.

2. LCD Backlit Saving


Reduce the power consumption by enhancing the backlight brightness to black level.

 Enable both LCD Backlit and password, while the backlit reaches the set-timing and turns into back screen, the system also log off simultaneously.

3. Daylight Saving Time


Daylight saving time (DST), and "Summer Time" in much of Europe, is the practice of moving local time forward one hour in the spring and backwards in the autumn.

Alarm Option

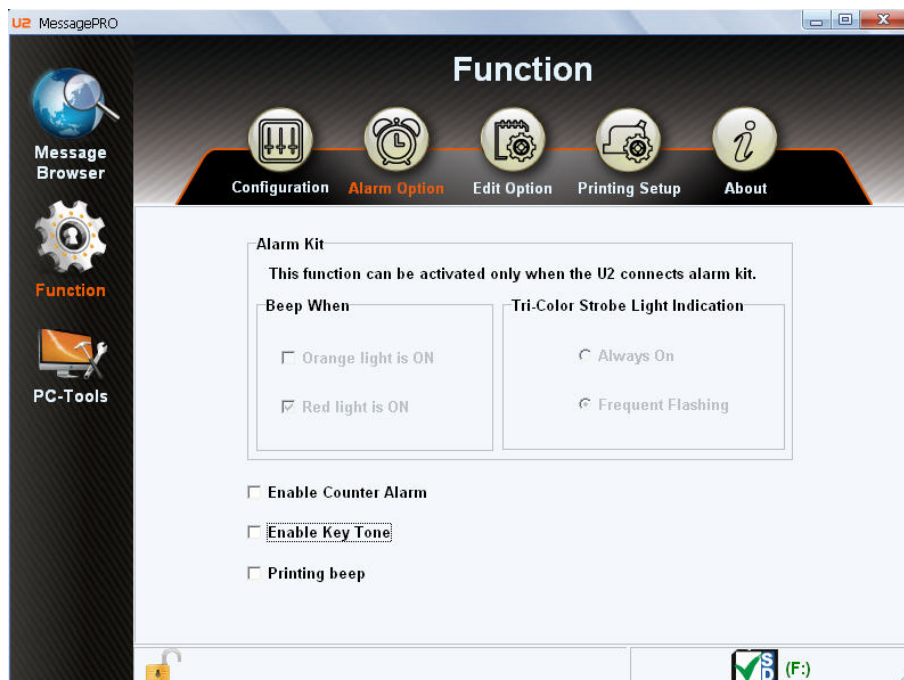

1. Alarm-kit (Optional)

When external Alarm kit has been connected to your system, the printer will detect the Alarm-kit automatically.


 The following form will tell you how Alarm LED will show due to all kinds of malfunction!

Alarm LED Instruction

Ink Low	Orange
Normal Work	Green
Ink Empty	Red
Invalid Cartridge	
Ink error: Ink Cartridge area code or sales code error	
No Cartridge	

2. Counter Alarm

Allow the printer making alarm sound when the pre-setup counter value has been reached.


 When **COUNTER ALARM** is **ON**, you are able to turn the **ALARM** ON/OFF in every single Counter with in a message.

3. Key Tone

Turn key tone of the U2 ON or OFF.

4. Printing beep

Turn tone of printing beep ON or OFF.

 When **Printing beep** is **ON**, you will be able to hear one beep sound every time you print.

Editing Option




1. Customer Year

Allow you to print customized year despite of the system year.

2. Rollover Hour

Allow you to print different date base on your production shift schedule.

 At 24 hour time convention, input time in the morning or afternoon reflects different printing date as following diagram presented:

For example: System Date: 2010/09/21.

- ① If you input time in the morning, the print date is changed to 2010/09/20. When it reached time you set, print date will be changed to the next day;
- ② If you input time in the afternoon, the print date is 2010/09/21. When it reached time you set, print date will be changed to the next day.

3. Message Name


Allow you to name/rename any message as your desire.

4. Counter Reset

To reset the counter before printing the message

5. Pre-Zero

Displays a digit or nothing! If the expression has a digit in the position where the # appears in the format string, display it; otherwise, display nothing in that position. This symbol works like the 0 digit placeholder, except that leading and trailing zeros aren't displayed if the number has the same or fewer digits than there are # characters on either side of the decimal separator in the format expression.

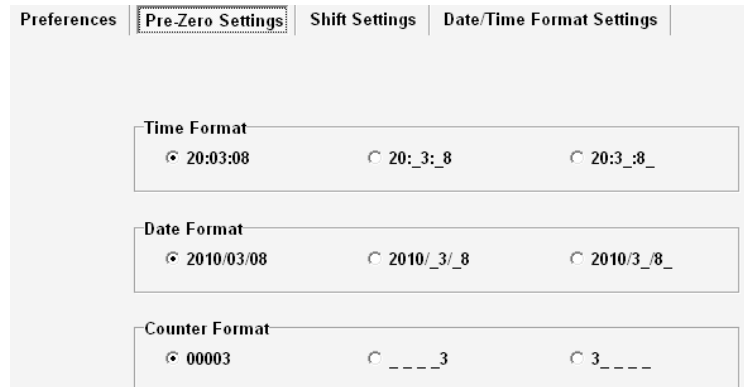

6. Shift

Allow user to record the shift rotation.


Enter shift name and time. (Refer to [Message Editor](#)-> [Shift](#))




7. Date/Time Format

This option allows you to customize time notation.


To create a new format:

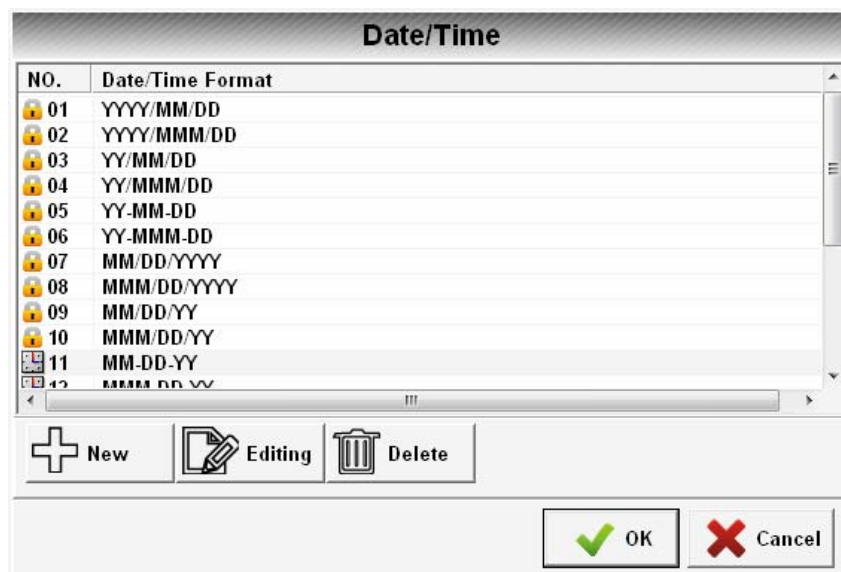- a. Click or to personalize [Data/time Format](#).



-   : Represent default format that can't be deleted or modified.
-  : Represent user-defined format that can be deleted or modified.

b. Editing Data/Time Format:

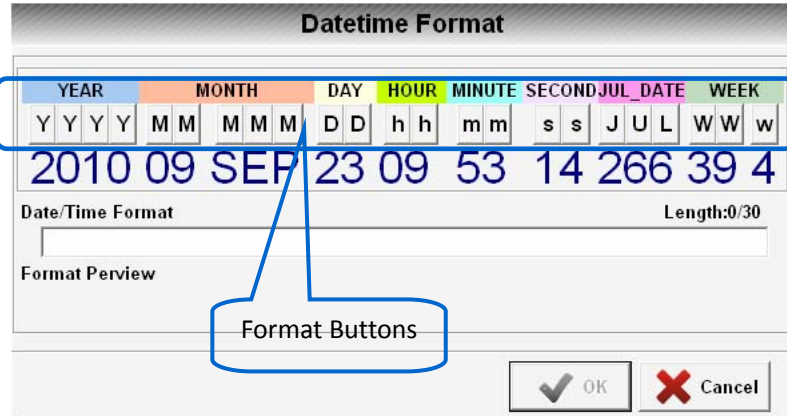


Datetime Format

YEAR			MONTH			DAY		HOURL	MINUTE	SECOND	JUL_DATE	WEEK										
Y	Y	Y	Y	M	M	M	M	M	D	D	h	h	m	m	s	s	J	U	L	W	W	w
2	0	1	0	0	9	S	E	P	2	3	0	9	5	3	1	4	2	6	6	3	9	4

Date/Time Format Length:0/30

Format Preview

Format Buttons

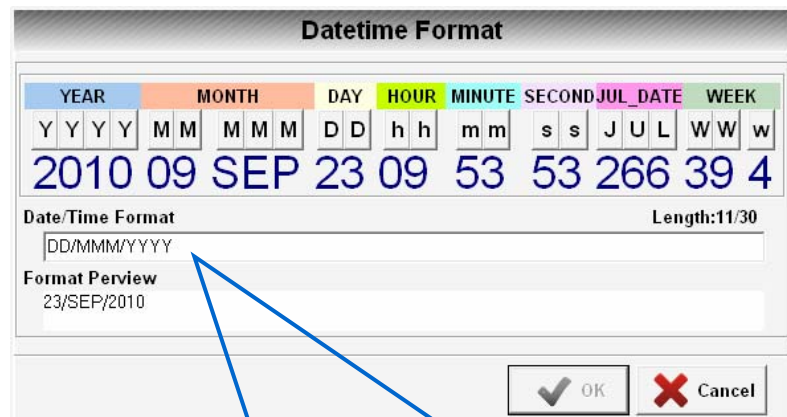

Datetime Format

YEAR			MONTH			DAY		HOURL	MINUTE	SECOND	JUL_DATE	WEEK										
Y	Y	Y	Y	M	M	M	M	M	D	D	h	h	m	m	s	s	J	U	L	W	W	w
2	0	1	0	0	9	S	E	P	2	3	0	9	5	3	5	3	2	6	6	3	9	4


Date/Time Format Length:11/30

Format Preview

23/SEP/2010

Click the format buttons as you desired! For some symbol such as (> / :), just input from your keyboard directly.

Printing Setup

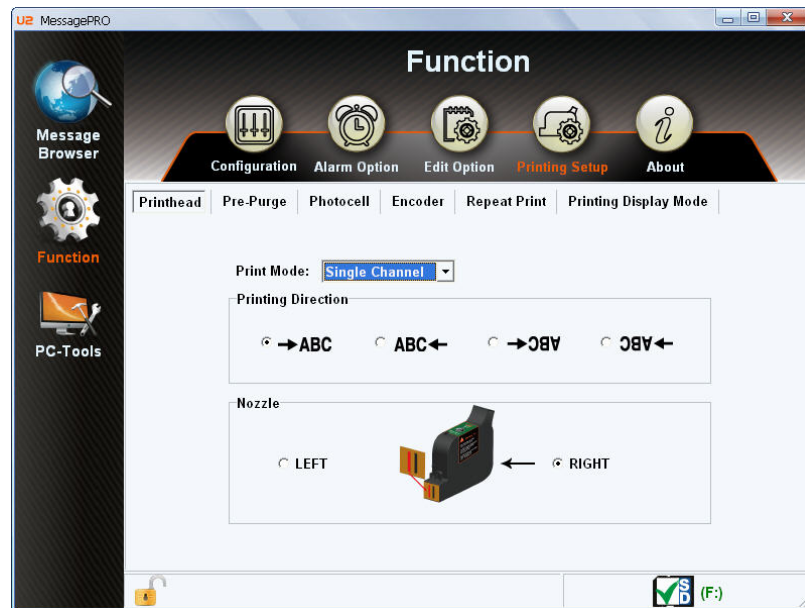

1. PrintHead

- Print Mode: Switch **SINGLE CHANNEL** or **DUAL CHANNELS**.
Dual Channels: Double the vertical resolution to 600dpi to optimize the printing darkness.
 - Direction: Switch the direction of printing.
 - ABC: Print from "A" to "C".
 - ABC←: Print from "C" to "A".
 - CBA: Print from "C" to "A" and rotate 180°.
 - ABC←: Print from "A" to "C" and rotate 180°.
 - Nozzle: Switch left (Default) or right.
 - Resolution: user can adjust resolution from 50~600, when the encoder is **OFF**.
- User can only adjust horizontal resolution.

2. Pre-purge

Enable Pre-purge function, the Printer will output ink dots periodically, preventing the ink solidified on the nozzle in a dry environment or long printing gap time.

Pre-Purge is an important attribution to the printing quality, especially with different semi-porous and none-porous ink, it is critical to adjust parameter for different environments due to the unique ink character and de-cap time.

3. Photocell

A sensor targets to objects and triggers the print timing. Select different photocell


prior to you need.

INTERNAL: Default internal photocell of U2 printer.

EXTERNAL: Connect an external photocell via external device interface. When you select **EXTERNAL**, and then choose **NORMAL** or **INVERT**.

NORMAL: PNP configuration in CMOS (Default).

INVERT: NPN configuration in CMOS.

 U2 mobile printer didn't support this function.

4. Encoder and Conveyor


When the speed of conveyor is inconsistent, install an encoder can ensure the print perfection regardless the speed of conveyor.

- When the Encoder is **OFF**, according to your conveyor equipment, input the conveyor speed.
- When encoder is **ON**

Input **PULSE/CYCLE** and **DIAMETER** of encoder and the software calculates the DPI automatically.

 Don't recommend modify **PULSE/CYCLE**, and default value is 2500.


 ANSER offers optional 400DPI encoder with 1.98" wheel diameter.

 The Encoder of U2 mobile printer is always **ON**.

5. Repeat Print

Enable the repeat print function.

- When **TRIGGER MODE** is **ON**, and select **FINITE PRINT**: Connect the photocell (internal or external)
 - a. Input the delay.
 - b. Input the repeat interval.
 - c. Input the repeat amount of times.
- When **TRIGGER MODE** is **ON**, and select **INFINITE PRINT**: Connect the photocell (internal or external)
 - a. Input the delay.
 - b. Input the repeat interval.

 When **TRIGGER MODE** is **OFF**, you just need input the repeat interval to print infinitely without photocell.

6. Printing Display Mode

Set the U2 Printing Display mode is **Printing Preview** or **Printing Report**.

PC-Tools


The setting in this section only reflects to **MessagePRO**.







User Account

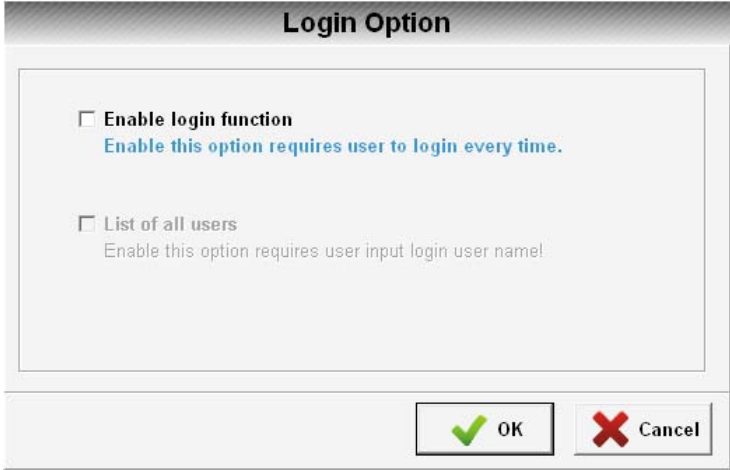
1. Login Option

Click  and select its properties.



Login function.

☞ Enable this option; the program will add **Logout**  in menu panel and **User Management** function. Click  and then you can choose **Switch User**  or **Exit** .

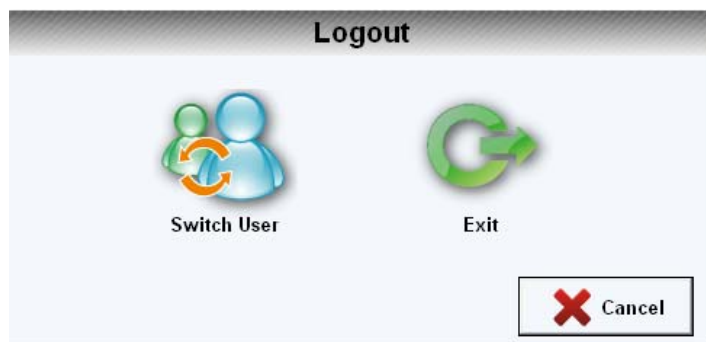

List all users

☞ List of all users checked: Every time you login, the program will display all the users of the system. Click Drop-Down box, and select the user you want to login.




☞ List of all users unchecked: Every time you Login, you need to input user name.





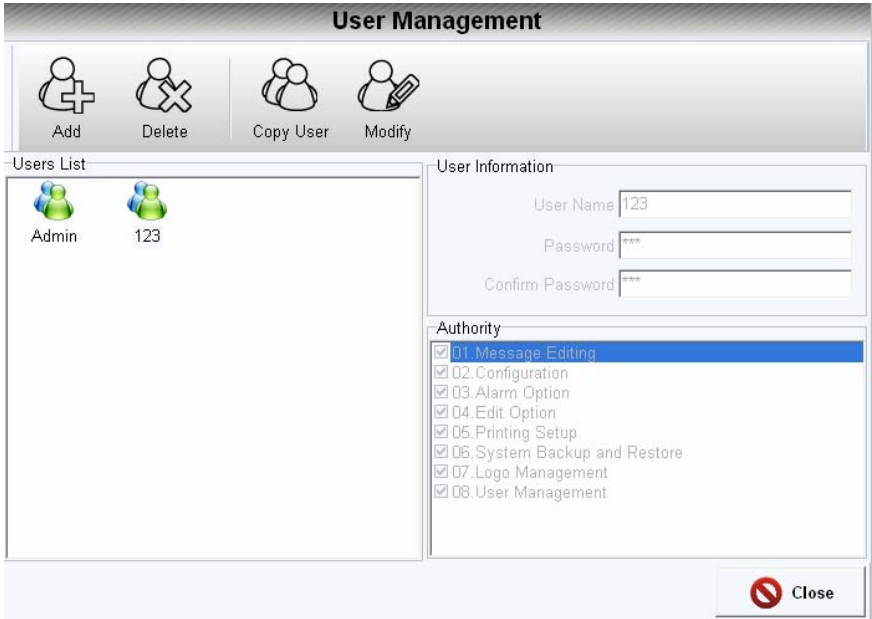

2. User Management



Click  to setup each user's accessibility..



User Operation button

Icon	Description
	Add a new user
	Delete the selected user
	Copy a new user which has the same password/authority;
	Modify the selected user

Buttons/fields of user operation

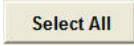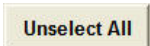Icon	Description
User name	Input user's name. (except the default user Admin)
Password	Input password
Confirm password	Input password again
	Select all authority
	Unselect all authority


System Backup/Restore

1. Backup


Click  button and input a new backup file name.



2. Restore


Click , and select a backup file and then click **OK**.


 All settings will be restoring to factory default value.

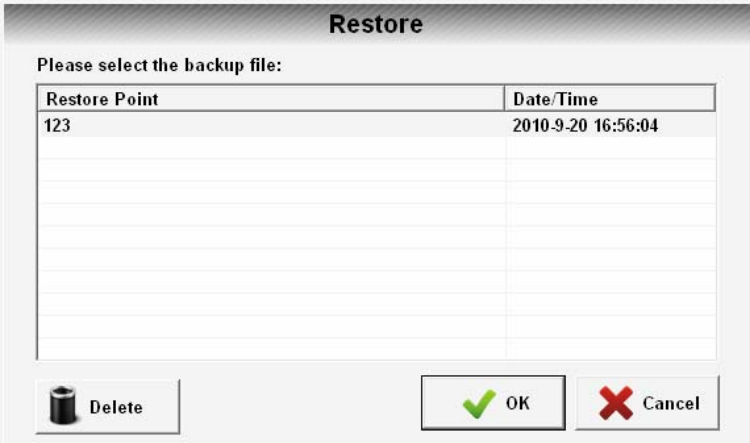





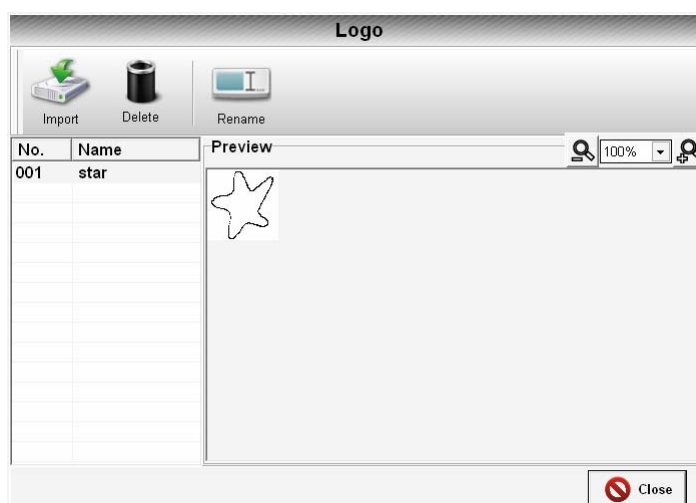

Logo Management

In order for U2 printer to locate the logo, all logo must be centralized and stored in a dedicated folder.

Click , and import the Logos that you want to create in a message.



Icon	Description
	Import logo files (*.bmp, *.alg)
	Delete logo
	Rename logo
	Zoom out
	Zoom in


 When you import a Logo, please be aware the height of logo due to the restriction by each **Line Mode**.

1. One Line: The height of the logo \leq 75 pixels;
2. Two Lines: The height of the logo \leq 37 pixels;
3. Three Lines: The height of the logo \leq 25 pixels;
4. Four Lines: The height of the logo \leq 18 pixels;

 Under 300DPI condition logos can be printed with original size.


1. If you do not use encoder, go to **Function** > **Printing Setup** > **PringHead** > **Resolution** and choose 300DPI;


2. If the resolution is not 300DPI, first you may calculate a value like “ $x = \text{Current DPI} / 300$ ”, then use **Paint** software to open the logo, choose **Image > Stretch/Skew...** and input the value of ‘x’ to “Horizontal” row.

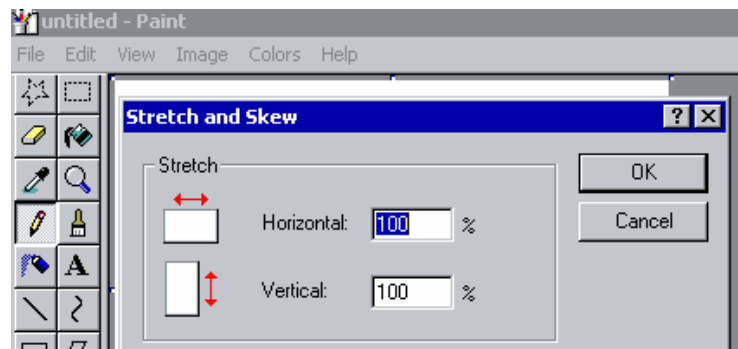


Registration

There are some add-in functions you need to register before using.

Click , and choose the software you need. Enter “Registration Code” in the column, and then click “Register”.

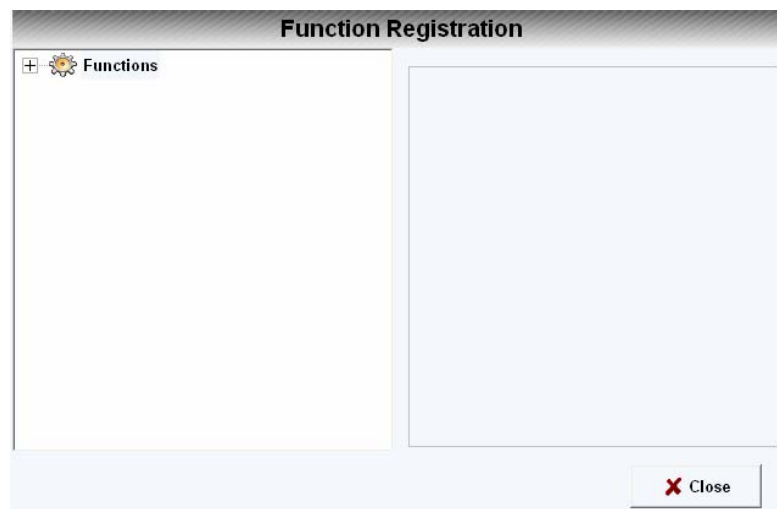

 Different U2 has different register code. Before inputting the register code which is compatible with the S/N of the U2, please make sure the corresponding SD card within U2 first.